



PRODUCT INSTRUCTION SHEET

Type-A/C Dual Function Solar Powered Barricade Light

Part#: DF002

Box Contents: 5 Lights; 5 Security Bolts; 1 Security Tool; 1 On/Off Push Pin

Operating Instructions for Part# DF002:

- The light comes fully assembled and ready to use right out of the box.
- The ON/OFF switch is in the OFF position when the light is shipped.
- You must turn the unit ON for the light to work.
- To turn the light ON or OFF, insert the push pin into the small hole/opening to the right of the “nut-plate” located in the center of the base front. You will then feel/hear the ON/OFF button depress.
- To ensure a full charge, place light outside during daylight hours for 6 hours prior to first use.
- It is best to deploy the lights during daylight hours.
- Once turned ON, light will automatically operate from dusk until dawn.
- Light changes from Flashing, to OFF, to Steady Burn, to OFF, when depressing power button.
- When testing the light outside during daylight hours (or inside) you must fully cover the solar panel on top of the light when pressing the ON/OFF button in order for the light to illuminate!
- The ON/OFF switch should ALWAYS be in the OFF position when light is in storage.
- If lights will be kept in storage, you must place the lights outside every 60 to 90 days in the OFF position to charge for one full day to maximize the life of the product and keep the unit fully charged.
- To attach light to barricade, place security bolt through the “eye-let” on the top corner of the barricade and then into the base of the light with the “nut-plate” on the opposite or far side of where the bolt is inserted. Use the security tool/socket wrench to tighten.

